

INSTALLATION INSTRUCTIONS

TRUNK RELOCATION KIT

6767

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Rear Bracket	4	M6 X 1 X 20mm Hex Flange Head Cap Screw
1	Front Bracket	1	M6 X 1.0 X 12mm Flat Head Socket Cap Screw
1	Left Cover	1	M6 No Slip Clip On Nut
1	Right Cover	1	Relocation Pad
		1	Adhesive Hook Pad

YOU WILL ALSO NEED:

Metric socket and hex bit set, ft-lbs (Nm) torque wrench, blue loctite

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

WARNING A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

STEP 2 Unfasten, disconnect and remove seat.

STEP 3 Refer to PIC 2. Open right (brake) side saddlebag. On the inside of the saddlebag, remove four (4) screws securing the trunk lid catch assembly to the top.

Note: Refer to motorcycle's service manual for assistance.

STEP 4 Locate the emergency trunk opener wire. Disconnect it from the trunk lid catch assembly. Route the trunk opener wire out from the saddlebag and through to the open area under the seat. Reinstall the trunk lid catch assembly in the saddle bag.

STEP 5 Refer to PIC 3. Disconnect wiring harnesses from the trunk. Unfasten hardware from the inside of the trunk and remove it from the motorcycle. Set the trunk on a flat clean surface. Set all hardware aside, it will be reused.




INSTALLATION INSTRUCTIONS

TRUNK RELOCATION KIT

6767

-CONTINUED-

STEP 6 Refer to PIC 4. Locate provided Rear Bracket and two (2) M6x1x20mm Hex Flange Head Cap Screw. Apply a small amount of blue loctite to the threads of the screws. Align the bracket with the rear mounting holes of the existing trunk bracket. Secure the rear bracket using the two screws.

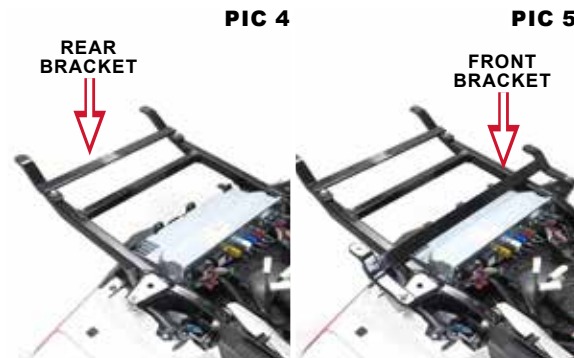

STEP 7 Refer to PIC 5. Locate provided Front Bracket and two (2) M6x1x20mm Hex Flange Head Cap Screw. Apply a small amount of blue loctite to the threads of the screws. Align the bracket with the front mounting holes of the existing trunk bracket. Secure the front bracket using the two screws.


STEP 8 Refer to PIC 6. Align and place the trunk on the relocation brackets. Make small adjustments to the front and rear brackets to properly align the mounting holes with the trunk. Loosely fasten the trunk to the front and rear bracket using the OEM hardware that was removed in Step 5, to verify all mounting holes are aligned. Unfasten and remove the trunk after brackets and trunk are properly aligned.



STEP 9 Fully tighten the rear and front brackets.


TORQUE VALUE FOR BRACKET SCREWS:
6.5 FT-LBS (8.8 Nm)

STEP 10 Refer to PIC 7. Apply a small amount of blue loctite to the threads of the OEM trunk mounting hardware from Step 5. Realign and place the trunk on the relocation brackets. Be sure emergency trunk opener and other wires that need to be fastened under the seat are position under the seat area and not under the trunk. Loosely fasten the trunk to the front and rear bracket.

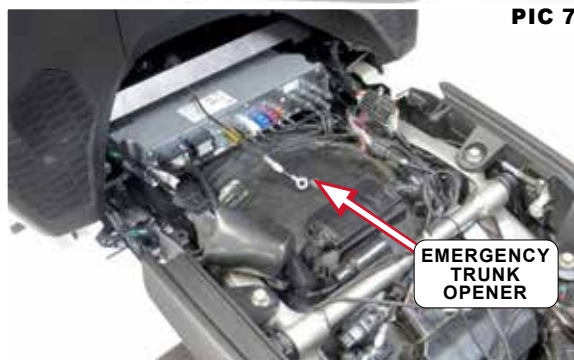

STEP 11 Connect the trunk wiring harnesses to the motorcycle's wiring harness.

STEP 12 Refer to PIC 8. Locate provided Left Cover, Right Cover, slip cover nut, and the M6 X 1.0 X 12mm Flat Head Socket Cap Screw. Align the slip nut over the tab of the right cover. Be sure mounting holes are aligned. Align the two covers together, insert the screw through the front of the covers to secure it in place. Fully tighten hardware.

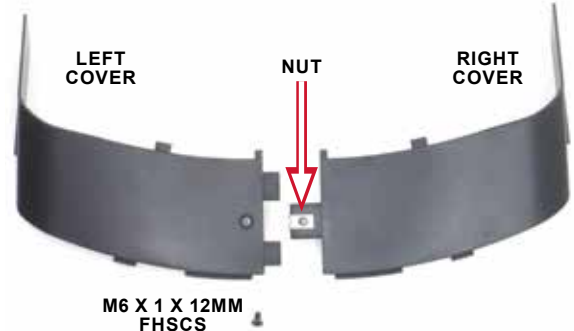

INSTALLATION INSTRUCTIONS

TRUNK RELOCATION KIT

6767

-CONTINUED-

STEP 13 Refer to PIC 9. On the under side of the rear part of the trunk, align the cover assembly with the trunk. Pop the cover into place. Be sure it clips into the bottom part of the trunk.



PIC 9

STEP 14 Fully tighten the mounting hardware in the trunk.

TORQUE VALUE OF TRUNK MOUNTING SCREWS:
7 FT-LBS (9.4 Nm)

STEP 15 Reinstall the seat.

STEP 16 Refer to PIC 10. Locate provided Relocation Pad and Adhesive Hook Pad. Attach the hook pad to the loop pad area located on the bottom of the relocation pad.



PIC 10

BOTTOM VIEW OF RELOCATION PAD

NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

STEP 17 Use your fingernail to rub the adhesive backing on the hook pad; this will activate the adhesive. Remove and discard the backing.

STEP 18 Refer to PIC 11 and 12. Align the Relocation Pad and Adhesive Hook Pad assembly, set it in the space between the trunk and the seat. Press on the relocation pad, where the adhesive pad is attached, for one minute; full bonding will occur after 24 hours.



PIC 11

PIC 12

Note: Do not remove relocation pad assembly before full bonding occurs (24 hours).

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



FINAL

INSTALLATION INSTRUCTIONS

TRUNK RELOCATION KIT

6767

-CONTINUED-

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice