# KURYAKYNU

# INSTALLATION INSTRUCTIONS

## **OMNI L.E.D. SIDE SADDLEBAG INSERTS FOR GL1800**

#### 3254 CHROME, 3255 SATIN BLACK

### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN **WARNING** POTENTIAL DEATH OR SERIOUS INJURY. THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR **A** CAUTION OR MODERATE POTENTIAL INJURY. THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY NOTICE AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- Left Saddlebag Light 1
- **Right Saddlebag Light** 1
- 2 Alcohol Pad

- 6" Cable Ties Cord Keepers 8 M5 x .8 Flange Lock Nut
- 2

### YOU WILL ALSO NEED:

Metric hex wrench set, Phillips head screwdriver, drill and drill bits, center punch, warm soapy water and a clean rag, blue loctite

12


THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY NOTICE AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

NOTE: THIS PART REQUIRES KURYAKYN WIRING ADAPTER P/N 3268 (SOLD SEPARATELY) FOR PLUG-&-PLAY INSTALLATION.

THIS PART WILL REQUIRE DRILLING INTO OEM PARTS. BE SURE NOTICE TO MEASURE TWICE, DRILL ONCE, AND ALWAYS DOUBLE CHECK THE REFERENCE MARKS MADE BEFORE DRILLING.

- STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- STEP 2 Refer to PIC 2. Open the saddlebags to remove the side covers. Unfasten, disconnect, and remove the seat. Set the seat, side covers, and all hardware aside, they will be reused.

STEP 3 Remove the main fuse.

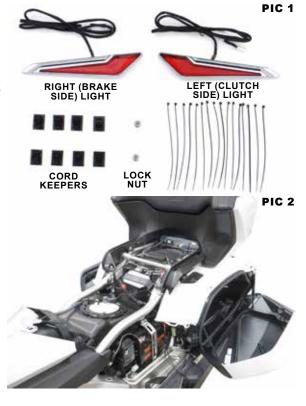

KURYAKYN.COM 866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025



# KURYAKYN

# **INSTALLATION INSTRUCTIONS**

## **OMNI L.E.D. SIDE SADDLEBAG INSERTS FOR GL1800**

#### -CONTINUED-

**STEP 4** Refer to PIC 3. Locate and disconnect the left and right saddlebag sub harness connectors.

Note: Refer to your motorcycle's service manual for assistance.

- **STEP 5** Refer to PIC 4. Locate the Wiring Adapter Kit (P/N 3268, sold separately). Connect the left and right adapter to the corresponding saddlebag sub harness connectors that were disconnected in Step 4.
- **STEP 6** Locate provided left (clutch side) and right (brake side) saddlebag lights. Connect the left light to a left wiring adapter connector and the right light to a right wiring adapter connector.
- **STEP 7** Reinstall main fuse and test lights for proper run/turn/brake operations. Disconnect lights after operational testing. Set them aside for the time being. Remove main fuse.
- **STEP 8** Refer to PIC 5. Disconnect the hinges holding the saddlebag lid.

Note: Refer to your motorcycle's service manual for assistance.

- **STEP 9** Refer to PIC 5. On the inside of the saddlebag lid remove the six (6) screws located at the bottom of it. Set them aside, they will be reused.
- **STEP 10** Refer to PIC 6. Remove the saddlebag lid's cover located at the bottom of the saddlebag.
- **STEP 11** Refer to PIC 7. On the back side of the saddlebag's cover remove the lock nut and washer, and remove the reflector from the front side. Set all aside, they will not be reused.
- **STEP 12** Refer to PIC 8. Locate provided saddlebag light. On the front side of the cover, align the light over the area where it will be installed. Use a sharpie to mark where the wiring lines up.
- **NOTICE** MEASURE TWICE – DRILL ONCE. DOUBLE CHECK ALL REFERENCE MARKS MADE ON THE SADDLEBAGS BEFORE DRILLING. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS DAMAGED AS A RESULT OF THIS INSTALLATION.



#### KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025



# KURYAKYN

# **INSTALLATION INSTRUCTIONS**

## **OMNI L.E.D. SIDE SADDLEBAG INSERTS FOR GL1800**

### -CONTINUED-

- **STEP 12** Refer to PIC 9. Drill a 5/16 hole all the way through the cover. Insert the wiring through the hole and test fit the light in the cover. Remove the light and make adjustments to the holes in the cover if needed.
- **STEP 13** Using warm soapy water and a clean rag, remove all dirt, debris, and adhesive from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pads; allow the area to dry completely.
- **NOTICE** ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

#### DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

**STEP 14** Refer to PIC 10. Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing. Align the light; press into place for one minute; full bonding will occur after 24 hours.

Note: If the bike is going to be operated before full bonding occurs, secure the hinge accent to the bike with a good quality masking or painter's tape.

- **STEP 15** Apply a small amount of blue loctite on the threaded bolt on the back side of the saddlebag light.
- **STEP 16** Refer to PIC 11. Locate provided Lock Nut. On the backside of the cover secure the light in place by fastening the lock nut to the threads on the back side of the light. Fully tighten hardware. Partially tuck the wire under the plastic boss of the cover, to help keep he wire in that area.
- **STEP 17** Refer to PIC 12. Locate hardware removed in Step 9. Reinstall the saddlebag cover onto the saddlebag, be sure the wire is routed through the bottom of the cover and in a safe place where the wire won't pinch.
- **STEP 18** Refer to PIC 12. Route the wire on the back side of the saddlebag and behind the pillon step holder cover. Continue to route the wire in safe places until it reaches the wire adapter under the passenger seat area.







LOCK NUT

PIC 12



KURYAKYN.COM 866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025



# KURYAKYN

## **INSTALLATION INSTRUCTIONS**

## OMNI L.E.D. SIDE SADDLEBAG INSERTS FOR GL1800

## -CONTINUED-

STEP 19	Refer to PIC 13. Connect the lights to their corresponding wire adapters.
STEP 20	Use provided Cable Ties and Cord Keepers to fasten the lights' wire under the side cover and under seat area. Be sure to fasten the wires where they won't pinch, pull, or be damaged.
STEP 21	Reinstall main fuse and test lights for proper run/turn/brake operations.
STEP 22	Reinstall the saddlebag hinges to the saddlebag lid.
STEP 23	Reinstall the side covers and seat, using the hardware that was removed in Step 2.
NOTICE	IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS



#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- 1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- 2. The product must be properly installed, maintained & operated under normal conditions.
- 3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
- 4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- 5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
- 6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

#### **RETURN POLICY**

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

#### ©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

#### KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025

