# GOAT-E™ LIGHT FOR GOLD WING

WARNING This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to ensure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

Included Items:



## Installation Instructions:

Before installing these lights you will need either the Plug-N-Play Lighting Installation Kit, #48000 or the Lighting Distribution Block #48010 installed.

1. Park on a level surface and shut off the motorcycle. Lift the motorcycle onto the centerstand if possible. Ensure the engine has time to cool before installation.

2. Open the saddlebags and remove the side covers by pulling away from the motorcycle with steady pressure.

3. Remove the seat by removing the socket head screws on both sides near the front of the seat. Pull up on the seat at the front and slide forward to remove. Unclip the seat warmer plug on the right side and disconnect.

4. Turn power on to the motorcycle and test the light and extension cable to make sure the run and turn lights function as intended by plugging into the underseat Plug-N-Play Harness or the Distribution Block, both sold separately. Fig. 2 shows the Y-extension cable plugged into the distribution block to the left and right sides. The right side will have a brown wire along side of a blue wire.

5, Remove the screw indicated in Fig. 3 to be able to flex out frame cover to run wire down and through cover. While pulling the cover out push wire up into cover from the bottom. A nylon wedge tool may be helpful to push the wire through at the corner. Run the wire through the fairing and over the valve cover and under the fairing shown in Fig. 4. Use provided cable keepers to keep wire secure. Tie off wire at brake line near top of fairing using provided cable tie.

6. Before removing screws shown in Fig. 6, you may want to remove the front fender to get more room to work. If not cover fender to protect the paint.

Fig.1

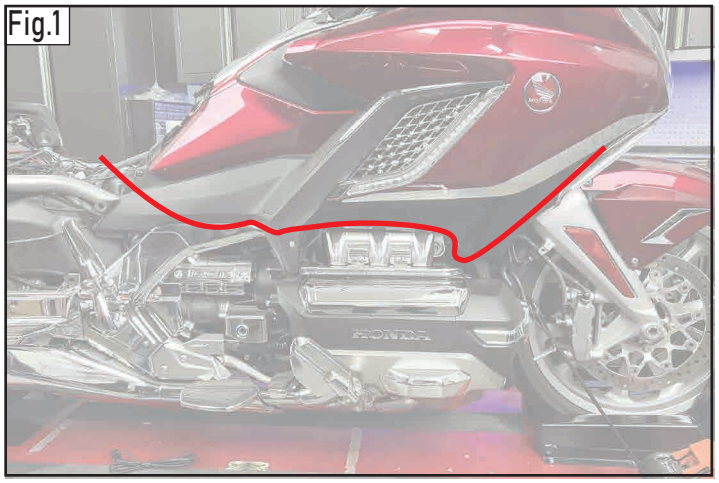


Fig.2


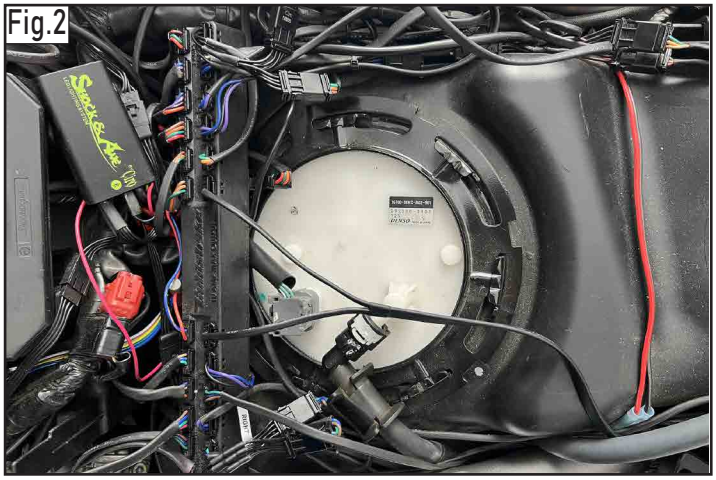


Fig.3

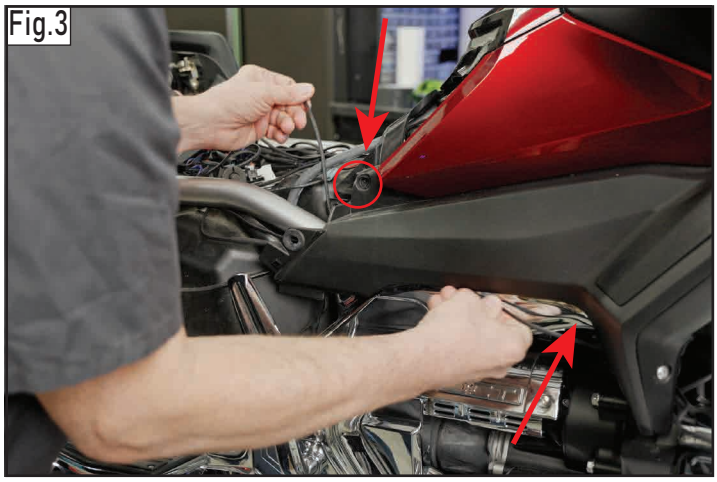

7. Remove front fender by removing two screws on either side and lift up and forward to remove from fender bracket and set aside. Fig. 5 Note that the lower fender screw has a plastic washer aligned with the shoulder of the screw when replacing and the upper screw goes into a threaded insert. Hold insert from behind when starting the screw to keep insert from moving out of alignment.

8. Remove the four screws indicated in Fig. 6 and set aside, these will be replaced with provided hardware.

9. See the diagram in Fig. 7 showing screw and washer placement. Start by mounting the bracket to the motorcycle using the black screws and small washers and thin spacers to attach to the sides first. Loosely tighten, Then use the silver screws , small washers and thick spacer to mount the bracket to the upper part of the fairing. Tighten when all screws are in place Fig. 8.

10. When attaching the light to the bracket, start by running the wire over top of bracket shown in Fig. 7 and starting at one end insert short screw and larger washer through bracket into light, finger tight. Insert remaining screws and washers and tighten all securely. Connect wire from light to extension wire as shown in Fig. 9. Check to make sure all wires are secured using provided adhesive cable keepers and cable ties.

11. Replace front fender (if removed), side covers and seat.

Fig.4

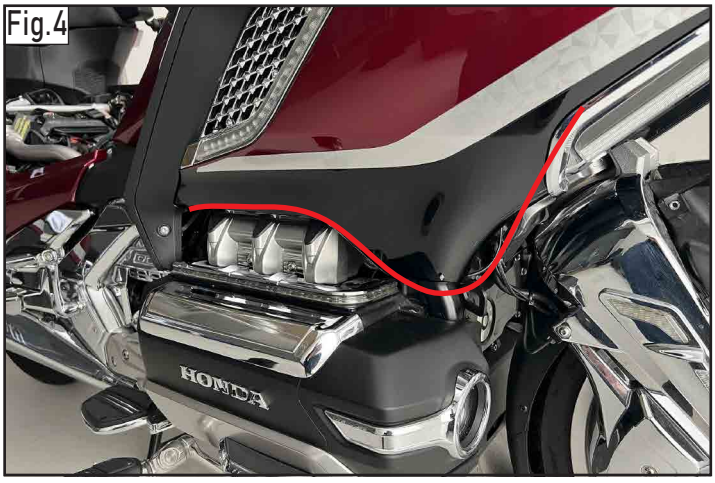



Fig.5



Fig.6

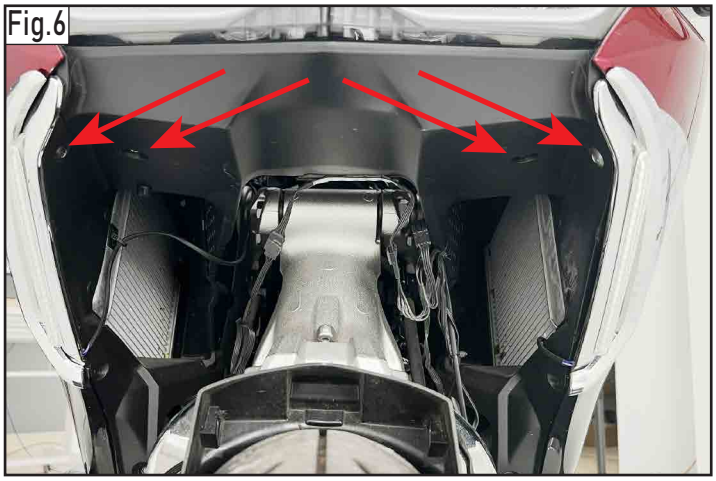


Fig.7

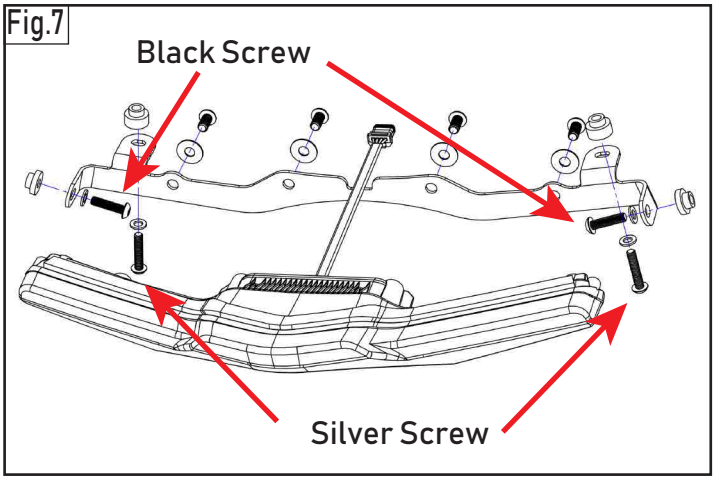



Fig.8



Fig.9

