

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-835B/ 52-835BK**BEVERAGE HOLDER**

GL1500 AND GL1800, HONDA AND YAMAHA CRUISERS, INDIAN 111 C.I.
HARLEY-DAVIDSON® WITH 1.5" OR 1.56" BOLT SPACING

1/10/2019

TOOLS NEEDED: 4MM (5/32") ALLEN WRENCH

5MM ALLEN WRENCH (METRIC)

10MM WRENCH

REMOVABLE
THREAD LOCK

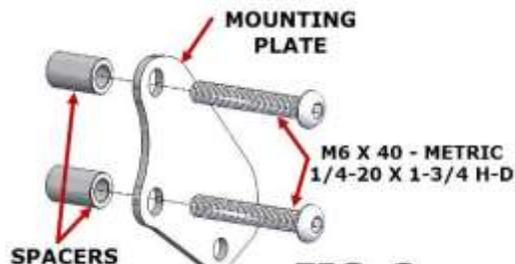
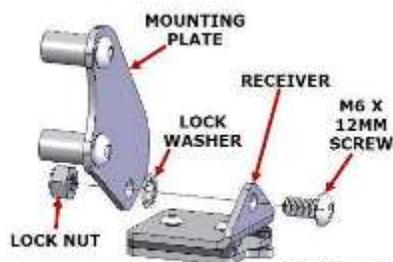
T30 TORX DRIVER (HARLEY)

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *ESTIMATED INSTALLATION TIME: 15 TO 20 MIN.*

NOTE: THIS CAN BE MOUNTED ON EITHER THE LEFT OR THE RIGHT SIDE OF MOTORCYCLE. THE INSTRUCTIONS ARE FOR A LEFT SIDE INSTALLATION. USE REMOVABLE THREAD LOCK ON ALL FASTENERS.

INSTALLATION:

1. REMOVE THE TWO BOLTS THAT HOLD THE CLUTCH LEVER TO THE HANDLEBARS. SEE FIG. 1. THEY WILL NOT BE REUSED.
2. APPLY THREAD LOCK NEAR THE END OF THE TWO SCREWS SUPPLIED WITH THE MOUNT. (M6 X 40 FOR HONDA AND YAMAHA) (1/4-20 X 1-3/4 FOR H-D)
3. ASSEMBLE THE SCREWS AND SPACERS AS SHOWN IN FIG. 2.
4. USING A 4MM (5/32") ALLEN WRENCH INSTALL THE MOUNT TO THE BIKE. SEE FIG. 3.
5. ASSEMBLE THE RECEIVER TO THE MOUNTING PLATE USING THE M6 X 12MM SCREW, LOCK WASHER, AND LOCK NUT AS SHOWN IN FIG. 4.
6. ADJUST THE ANGLE OF THE RECEIVER MOUNT AND TIGHTEN USING A 4MM ALLEN WRENCH AND A 10MM WRENCH.
7. SLIDE BEVERAGE HOLDER INTO THE MOUNT AND INSTALL THE M3 SCREW AS SHOWN IN FIG. 5.

**FIG. 1****FIG. 2****FIG. 3****LEFT SIDE****FIG. 4****FIG. 5**

Scan code with
your smartphone
to view video

